


#1

Enter/Exit Program Mode




Tab Suffix On When this option is on, the scanner will transmit a



L P 3


#2

XT Keyboard



L P 4

Enable IBM PS/2 Keyboard (Models 30, 70, 8556)




S H 4

** Disable IBM PS/2 Keyboard (Models 30, 70, 8556)



S H 3


(AT and PS/2 modes only)



P A 1

chosen, the scanner will transmit an FOH between make and break key codes.

Do Not Transmit FOH Break Code Suppress FOH break code transmission between the make and break key codes.



P A 3


#3

Reserved



 
#4

Enter/Exit Program Mode



KB Parameter - Special Features

** Transmit FOH Break Code When transmit FOH break code is



O C 6